# PEAK HOOK


# RIDGE FASTENING HOOK FOR FLAT AND SHAPED **TILES**

#### **FAST DRY INSTALLATION**

For installing the ridge without foam or mortar, in accordance with UNI 9460.

#### COMPLETE RANGE

Available in different versions and colours to suit different types of roofs.

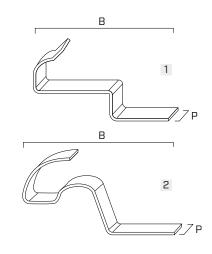





## **CODES AND DIMENSIONS**

	CODE	В	Р	В	Р	version	material	colour	RAL	
		[mm]	[mm]	[in]	[in]					
1	PUNIRED	115	18	4.5	0.7	universal	aluminium	brick red	8004	50
	PUNIBRO	115	18	4.5	0.7	universal	aluminium	brown	8017	50
	PUNIANT	115	18	4.5	0.7	universal	aluminium	anthracite	7021	50
2	PCURRED	80	18	3.2	0.7	shaped	aluminium	brick red	8004	50
	PCURBRO	80	18	3.2	0.7	shaped	aluminium	brown	8017	50
	PCURANT <sup>(1)</sup>	80	18	3.2	0.7	shaped	aluminium	anthracite	7021	50

 $<sup>\</sup>overline{\mbox{(1)}}$ Products available only upon order.

## RECOMMENDATIONS FOR INSTALLATION





Waste classification (2014/955/EU): 17 04 02.